
REMOVAL INSTALLATION AND ADJUSTMENT OF THE STRAP

To remove the existing strap, you need to extract the pin from the grip, making sure to gently tap the flat side.




Once the pin has been fully removed from its housing, the wedge inside the handle cavity can be taken out.

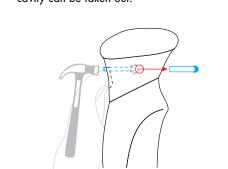


After removing the wedge, proceed with inserting the new strap.




Lay out the strap with the plastic wedge, ensuring the teeth are facing upward.

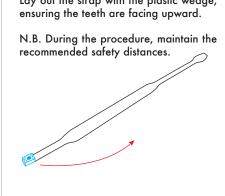


Flip the part with the plastic wedge upside down and overlap it with the other end, keeping a distance of 10 cm.

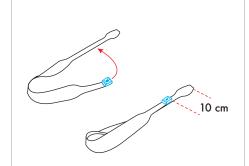


Flip the wider part of the strap and make sure it passes over the wedge, forming a loop.

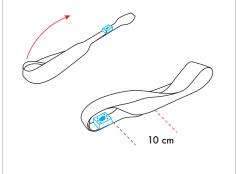


Make sure the distance between the loop and the wedge is approximately 1.5 cm.

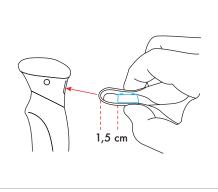

Hold firmly and insert into the hole of the grip.

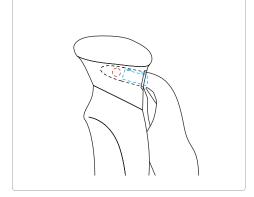


Insert the pin into the larger hole on the side of the grip and push it all the way in.

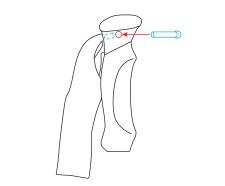


For proper use, insert your hand from the bottom upwards. To adjust, pull the end of the strap toward yourself.





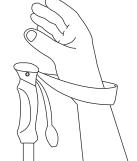

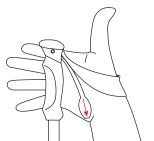



SUMMARY



Plastic components





PIN


WEDGE

RIMOZIONE, MONTAGGIO E REGOLAZIONE LACCIOLO


rimuovere il lacciolo esistente estrarre il perno dalla manopola, avendo cura di colpirlo delicatamente nella parte dove è piatto.



Una volta che il perno sarà uscito completamente dalla sede, rimuovere il cuneo all'interno della cavità della manopola.

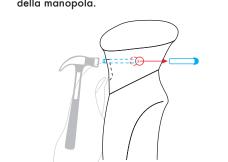


Dopo aver rimosso il cuneo procedere con l'inserimento del nuovo lacciolo.

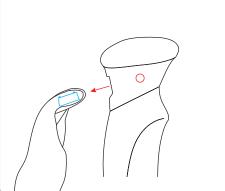


Distendere il lacciolo con il cuneo in plastica con i dentini rivolti verso l'alto.




Ruotare sotto-sopra la parte con il cuneo in plastica e sovrapporla all'altra estremità tenendo 10 cm di distanza.

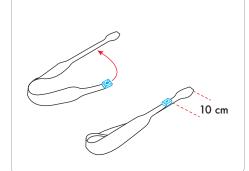


Capovolgere la parte larga del lacciolo e assicurarsi che oltrepassi il cuneo creando un'asola.

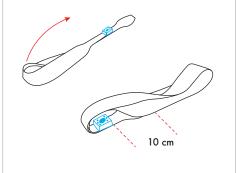


Assicurarsi che la distanza tra l'asola e il cuneo sia di circa 1,5cm.

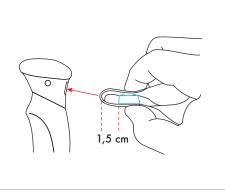

Tenere ben saldo e infilare dentro il foro della manopola.

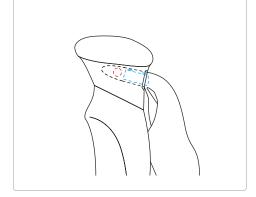

Infilare il perno nel foro più largo sul lato della manopola e spingerlo fino a fine

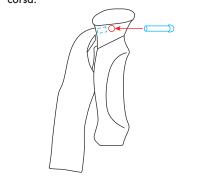


Per un corretto utilizzo, infilare la mano dal basso verso l'alto. Per la regolazione tirare l'estremità del lacciolo verso di se.







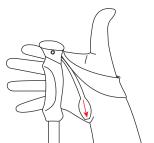



LEGENDA



Componenti in plastica





PERNO

CUNEO